

Bevel Frame Toilet Paper Combo Unit

(Model: TP-12)

Hole-Cutting Template and Mounting Instructions

1. Your toilet paper holder may have come to you unfinished so that you can paint or stain it to match your particular décor.

2. Attach backer board using nails provided.

We leave this off because some customers prefer to paint their backer boards to match their wall color, or they want to cover it with wallpaper. So we like to give them the option to do that.

3. Cut the template out of this page. Use this template to draw the area on the wall that you will be cutting out. Be sure that you have checked the wall with a stud finder and marked where the studs are located. Normal stud spacing will have 14 1/2 inches between them, so the Toilet Paper Holder should have more than ample space.

4. Cut the hole in the drywall using a drill and drywall saw. Use a drill to drill a hole in each corner of the rectangle, then insert a drywall saw into each drilled hole and cut to the next one.

5. Using construction adhesive found at any hardware store, apply a bead all the way around the outer edge of the back of the Toilet Paper Holders' frame moulding . (See Figure 1)

6. Insert the Toilet Paper Holder into the hole and press it into place.


7. If desired, place a very thin bead of painter's caulk around the outer edge to fill any small gaps due to uneven wall surfaces.

Figure 1.

**PLEASE USE CONSTRUCTION ADHESIVE
SUCH AS LIQUID NAILS HERE.**



WG *Wood Products*

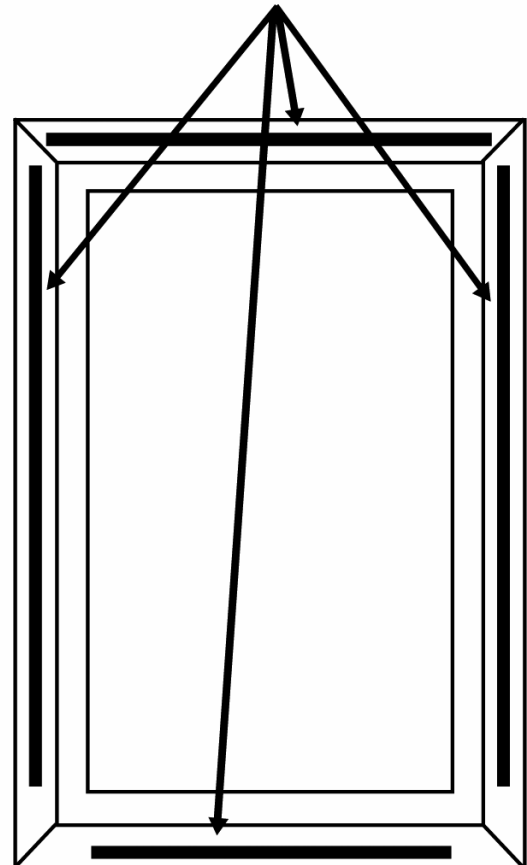

**THIS IS A BACKSIDE VIEW OF
THE UNIT.**

Top